

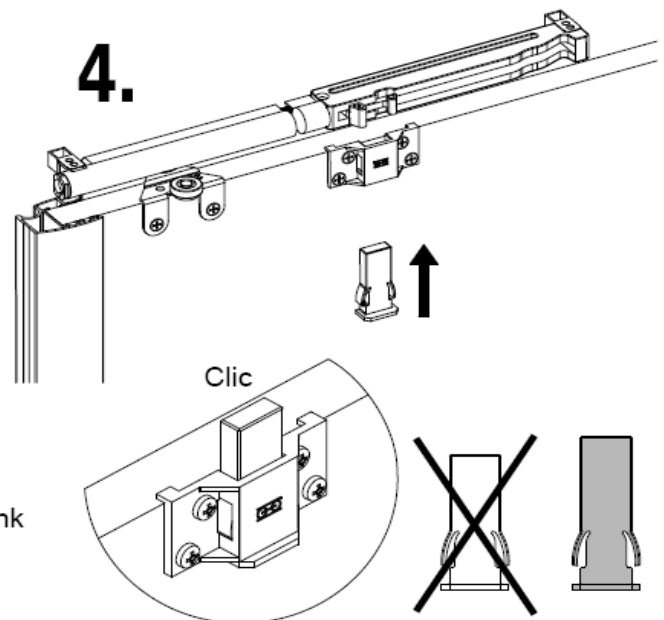
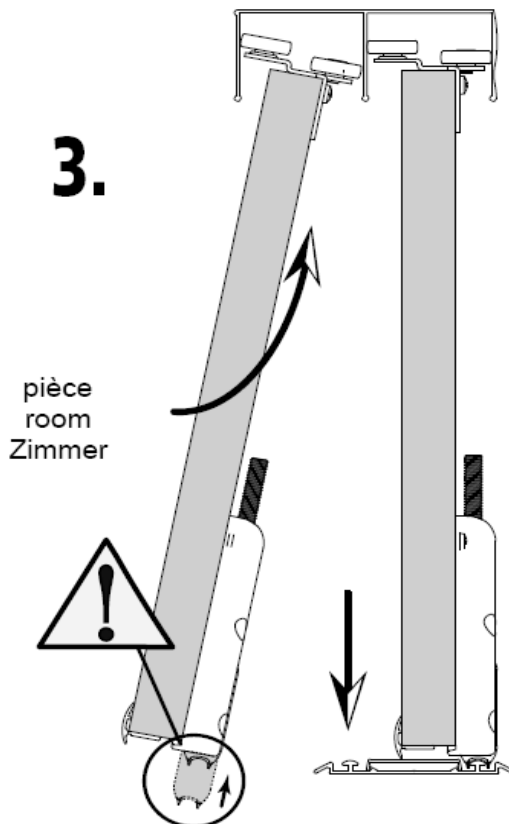
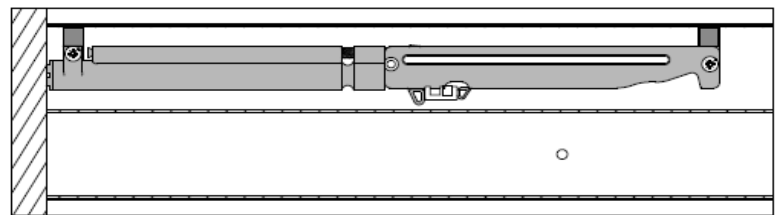


# HANDLEIDING DUOLINE SOFTCLOSE DEMPER

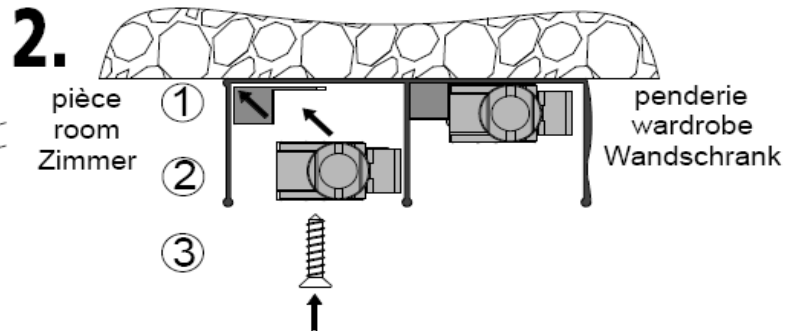

**Hp** = Hauteur des panneaux / Panel height / Flügelhöhe

**Hp** =  $H - 44 \pm 1$  mm

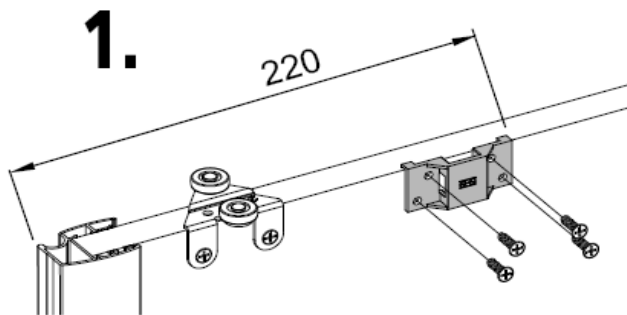

**LET OP !!! NA MONTAGE DEMPER HANDMATIG OPSPANNEN**